



Norsk Data

Product Information

Product name

Upgrade for Basic SYSTEM Software
for Small Systems

Product number

380739A

Description of product

This product contains corrections to the product "Basic SYSTEM Software for Small Systems" - ND-211470B01

Reason(s) for new product or version

This product was created to simplify the correction of errors on Basic SYSTEM Software for Small Systems ND-no. 211470B01.

Table of Contents

Page

| | |
|--|---|
| Prerequisites | 2 |
| Dependencies | 3 |
| Documentation | 3 |
| Installation procedure | 4 |
| Errors corrected | 4 |
| Errors known but not corrected | 4 |
| Modifications | 6 |

Product Information

Product name
Upgrade for Basic SYSTEM Software
for Small Systems

Product number
380739A

1 Prerequisites

The following things are required in order to use this product.

1.1 Hardware prerequisites

The following hardware must be present for this product to be used:

CPU type (any of the following):

- 5000

Floating format on the 100/110/120 CPU: 32 bit.

Other hardware:

- A system disk of 310MB SCSI.

1.2 Software prerequisites

The following software must be installed on the system for this product to be used:

Operating system:

Name

Version/Revision

None

Other software:

Product name

Product number

Basic SYSTEM Software
for Small Systems

211470B01

1.3 Other prerequisites

The following is necessary for this product to be used.

Minimum Permanent Mass Storage:

See PI-sheet for 211470B01.

Product Information

Product name
Upgrade for Basic SYSTEM Software
for Small Systems

Product number
380739A

2 Dependencies

In addition to the above listed hardware and/or software prerequisites, the following dependencies exist between this and other products. The hardware and software listed here may, for example, be necessary to use the product's full functionality.

2.1 Hardware dependencies

None

2.2 Software dependencies

There are dependency relationships between this product and the following software:

The necessary software key for the activated modules must be installed on the system before configuration.

Nature of dependency

If the softkey is NOT installed, installation of some products is not possible.

2.3 Other dependencies

In addition to the hardware and software dependency relationships listed above, you should be aware of the following dependencies:

Product name
None

Product number

3 Documentation

Included (distributed free with product)

| <u>Module</u> | <u>Title</u> |
|---------------|--------------|
| None | |

Optional (must be purchased)

| <u>Module</u> | <u>Title</u> | <u>Number</u> |
|---------------|--------------|---------------|
| None | | |

Product Information

Product name
Upgrade for Basic SYSTEM Software
for Small Systems

Product number
380739A

4 Installation procedure

4.1 Automatic installation

The installation should be done before running the program:
@(EXTRA-SYSTEM)SYSTEM-CONFIG

Insert the floppy 380739A<rev>-XX-01D in floppy unit 0, enter the directory 380739A00-XX-01D and run the mode file PAT-211470B01:MODE

The missing UE-ERMES-xx-Cyy:ERR where yy is equal or newer than 13, is in the case of the languages ENGLISH, GERMAN and NORWEGIAN included.

For other language options THIS HAS TO BE INSTALLED EXTRA.

4.2 Non-automatic installation

None

5 Error Correction

5.1 Errors known but not corrected

The following are known but not corrected errors on streamer 211470B01.

The errors should be corrected before running the program:
@(EXTRA-SYSTEM)SYSTEM-CONFIG

as described in the installation procedure.

A) Some mode files on user MODE-FILES are incorrect.

Solution:

Use BACKUP-SYSTEM and copy all files from LANGUAGE:SAVE-MODE to PACK-BASIC:MODE-FILES before configuring the system.

Product Information

Product name
Upgrade for Basic SYSTEM Software
for Small Systems

Product number
380739A

- B) The name of the new domain format linker is ND-LINKER. This gives problems in some mode files calling the ND-500-MONITOR using the shortened call @ND only.

Solution:

Edit the file (MODE-FILES)ND-500-HENT:MODE using PED. Substitute ND-LINKER with LINKER.

- C) File access on the file (SYSTEM)ORIGINAL-SYSTEM:LIST is wrong.

Solution:

Use the command:

@SET-FILE-ACCESS ORIGINAL-SYSTEM:LIST,,r,rwacd

before configuring the system.

- D) Backup-Manager has problems (unknown server or system) after running @(EXTRA-SYSTEM)STOP-MODE:MODE.

Solution:

The reason is that UE is enabled also on the console, and UE-files are open after stopping the UE-server. The user (as always on other terminals after stopping the UE-server) has to log out and then again log in before using the Backup-Manager. Eventually, UE can permanently be disabled on the console.

- E) Backup-Manager gives the wrong error message texts if using the NON-English version.

Solution:

Install UE-ERMSG-<rev>-C13:err (or NEWER c-version) where -<rev>- is the relevant language version.

Product Information

Product name
Upgrade for Basic SYSTEM Software
for Small Systems

Product number
380739A

5 Modifications

5.1 New functions/commands

None

5.2 Changed functions/commands

None

5.3 Removed functions/commands

None

5.4 Other modifications

None

6 Errors corrected

None

7 Errors known but not corrected

None